


GET TO KNOW YOUR DRYER

Model 289

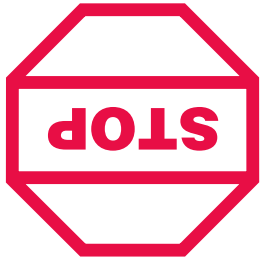

This message about...

G

ROUND

F

AULT

C

IRCUIT

I

NTERRUPTERS

...can save a life!



IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you... even if the switch can cut breaker won't protect you in this position, the dryer operates in all available heat and speed settings.



A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

! DANGER

Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.
6. This appliance should never be used by, on, or near children or individuals with certain disabilities.

! WARNING

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
4. Do not use with voltage converter.

For a dual voltage hair dryer:

1. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
2. This appliance was set at the factory to operate at 125 volts. Refer to Additional information section of this manual for upright and away from your face, grasp the plug with one hand, then press and hold the retract button with the other. Guide the cord and keep it from twisting. If the cord does not retract completely, pull it out slightly and wind it again guiding it into the reel. DO NOT RETRACT CORD WHILE DRYER IS PLUGGED IN. DO NOT ALLOW SMALL CHILDREN TO HANDLE THE RETRACT-CORD TO "WHIP" AND CAUSE INJURY.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to Conair for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate this appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Do not place appliance on any surface out of it. Keep your hair away from the air inlets.
13. While using the appliance, keep your hair away from the air inlets.
14. Do not use with voltage converter.

ADDITIONAL INFORMATION

FOR DUAL-VOLTAGE DRYERS

For use in the U.S.A., the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 250 volt supply, use an attachment plug adapter or the proper configuration for the power supply receptacle. While it's plugged in, the electric shock can kill you... even if the switch can cut breaker won't protect you in this position, the dryer operates in all available heat and speed settings.


USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

OPERATING GUIDE

1. Plug in hair dryer and press test button on plug (see appropriate diagram below).
2. Hair dryer will stop working. There will be an audible click and a reset button will pop out.
3. To reset ALCI with a reset button: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.
3. To retract cord, hold dryer vertically upright and away from your face. Grasp the plug with one hand, then press and hold the retract button with the other. Guide the cord and keep it from twisting. If the cord does not retract completely, pull it out slightly and wind it again guiding it into the reel. DO NOT RETRACT CORD WHILE DRYER IS PLUGGED IN. DO NOT ALLOW SMALL CHILDREN TO HANDLE THE RETRACT-CORD TO "WHIP" AND CAUSE INJURY.
5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.
6. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer.
- Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

IF ALCI is not functioning properly, return hair dryer to an authorized Conair service center.

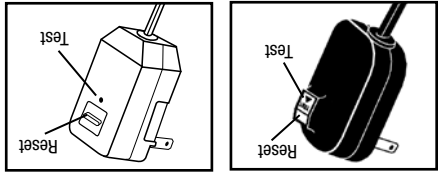

1. Plug in hair dryer and press test button on plug (see appropriate diagram below).
2. Hair dryer will stop working. There will be an audible click and a reset button will pop out.
3. To reset ALCI with a reset button: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

1875 WATT OPERATING GUIDE IMPORTANT

- Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.
- Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.
- Be sure to repeat test every time you use hair dryer to confirm ALCI is operational. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer.
- Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

SUPER STYLING GUIDE

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over-drying, do not concentrate heat on any one section for any length of time.
4. For quick touch-ups, between shampoos, Keep dryer moving as you style.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish style-ing with the cool shot feature to close hair shaft and lock in style.

DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over-drying, do not concentrate heat on any one section for any length of time.
4. For quick touch-ups, between shampoos, Keep dryer moving as you style.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish style-ing with the cool shot feature to close hair shaft and lock in style.

BODY & VOLUME

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over-drying, do not concentrate heat on any one section for any length of time.
4. For quick touch-ups, between shampoos, Keep dryer moving as you style.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish style-ing with the cool shot feature to close hair shaft and lock in style.

STRAIGHTENING

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over-drying, do not concentrate heat on any one section for any length of time.
4. For quick touch-ups, between shampoos, Keep dryer moving as you style.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish style-ing with the cool shot feature to close hair shaft and lock in style.

MAKING WAVES

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over-drying, do not concentrate heat on any one section for any length of time.
4. For quick touch-ups, between shampoos, Keep dryer moving as you style.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish style-ing with the cool shot feature to close hair shaft and lock in style.

1875 WATT cord keeper™ STYLER



CONAIR® PROFESSIONAL RESULTS AT HOME

Model 289
Instruction & Styling Guide

1. Power

- 1.875 watts of drying power.
2. Two heat/speed settings allows for precision styling.
3. Cool shot button locks in style.
4. Folding handle for easy storage.
5. Retractable cord with a push of a button, the dryer cord retracts into the handle.
6. Dual voltage perfect for worldwide travel.



3. Cool shot button

- 1.875 watts of drying power.
2. Two heat/speed settings allows for precision styling.
3. Cool shot button locks in style.
4. Folding handle for easy storage.
5. Retractable cord with a push of a button, the dryer cord retracts into the handle.
6. Dual voltage perfect for worldwide travel.



5. Retractable cord

- 1.875 watts of drying power.
2. Two heat/speed settings allows for precision styling.
3. Cool shot button locks in style.
4. Folding handle for easy storage.
5. Retractable cord with a push of a button, the dryer cord retracts into the handle.
6. Dual voltage perfect for worldwide travel.



6. Dual voltage

- 1.875 watts of drying power.
2. Two heat/speed settings allows for precision styling.
3. Cool shot button locks in style.
4. Folding handle for easy storage.
5. Retractable cord with a push of a button, the dryer cord retracts into the handle.
6. Dual voltage perfect for worldwide travel.



Please register this product at:
www.conair.com/registration

CONAIR CORPORATION SERVICE CENTER

Service Department
7475 N. Glen Harbor Blvd
Glendale, AZ 85307
©2012 CONAIR CORPORATION
12PD131613

1B-17401

